



2006 Scheduled Maintenance Intervals

Miles (in thousands)	5/25/45/65/85/105	15/55/95	35/75
(ilometers (in thousands)	8/40/70/100/130/160	25/85/145	55/115
ingine Oil – change oil and replace filter	•	•	•
Viper/Washer/Headlight Washer – check adjustment and function, add fluid if necessary	•	•	
ires and Spare – check for wear and damage, check pressure	•		
 - check for wear and damage, check pressure and renewal date of tire set (where applicable) 		•	•
res – rotate	5K only		
ervice Reminder Display – reset	•	•	•
rake System – check for damage, leaks, pad thickness, fluid level	•	•	•
/iper Arm Pivot Points – lubricate	•	•	•
ooling System – check level, add if necessary		•	
xhaust System – check for damage, leaks		•	•
ngine On-Board Diagnostics – check fault memory		•	•
ngine Compartment – check for leaks		•	•
attery – check electrolyte level and add if necessary		•	•
ust and Pollen Filter - replace		•	•
utomatic Transmission and Final Drive – check for leaks		•	•
lanual Transmission and Final Drive – check for leaks		•	•
SG (direct shift gearbox) – change oil and replace filter element			A3 and TT only
aldex Clutch – change oil		TT only	A3 and TT only
– change filter			TT only
unroof – clean guide rails and lubricate rails with grease spray		•	•
ront Sunroof Drains (where applicable) – open sunroof to check front water drain and clean if necessary (U.S. only)			•
lenum Panel – remove cover to plenum panel to check water drains and clean necessary (U.S. only)			A4, A4 Avant, A4 Cabriolet, S4, S4 Cabriolet, A6, A6 Avant and A8
ront and Rear Axle – check for excessive play, check dust seals on ball joints nd tie rod ends		•	•
ghts – check all lights, check headlight adjustment		TT, A4 Cabriolet and A8 only	•
rive Shaft Boots – check		•	•
oors – lubricate doors, check straps		TT, A4 Cabriolet and A8 only	•
park Plugs – replace at 35,000 miles or 3 years, whichever occurs first. Then, every 40,000 miles or 3 years, whichever occurs first.			 35K only: 1.8T, 3.0L, 3.2L VR6 and 6.0L
 replace at 55,000 miles or 6 years, whichever occurs first. Then, every 60,000 miles or 6 years, whichever occurs first. 		 55K only; except 1.8T, 3.0L, 3.2L VR6 and 6.0L 	
- replace at 75,000 miles			 75K only: 1.8T, 3.0L, 3.2L VR6 and 6.0L
ontinuously Variable Transmission (multitronic) – change ATF			•
ower Steering Fluid - check, add if necessary			•
ir Cleaner – clean housing, replace filter element		• 55K only: A3, A4, A6 and A8 4.2L	TT and A8 6.0L only
ibbed V Belt – check condition			 35K only: A8 6.0L; 75K only: A8 6.0L, 2.0 TFSI, 3.0L and 3.2L
- replace			75K only; except 2.0 TFSI, 3.0L, 3.2L and 6.0L
now Screen for Air Cleaner – clean		A4 and A6 only	A4 and A6 only
nderbody – check for damage and leaks		•	•
oad Test – check braking, kick-down, steering, electrical, heating and entitlation systems, air conditioning, shift lock operation and power accessories		•	•
ear Lid Hinges – lubricate		A8 only	A8 only
iming Bolt - replace			75K only: 1.8T, 3.0L and
iming Belt – replace			A8 4.2L

Brake Fluid – replace every 2 years regardless of mileage.

Cloth Top – check function and rollover protection every 2 years regardless of mileage (Audi A4 Cabriolet only).

At 110K miles (175km) replace timing belt (2.0 TFSI engine only). Check condition of timing belt tensioning system, dampening pulleys, and idler pulleys and replace if necessary (2.0 TFSI engine only). Audi of America, Inc. believes the information and specifications to be correct at the time of printing. Specifications, maintenance intervals, standard features and options subject to change without notice.